



Lomanco 800 Series Installation Instructions

1. Installation of Lomanco, Inc. Roof Louvers should comply with all local codes and standards.


2. Important! The 800 series roof louvers are designed with elongated nail holes to compensate for expansion and contraction. Use these Holes for installation. Lomanco, Inc. does not recommend using staples on the roof vent.

INSTALLATION

1. Aesthetically it is best to locate vents on the rear slope of the house. You also want to center vents on the roof length.

2. The vent should be centered between rafters. Locate rafters by tapping roof with a hammer. Locate and mark center between rafters.

3. Warm air rises, therefore, you want to locate roof vents as near as possible to the ridge line. Locate the vent hole roughly 24" (36. Max) down from the ridge line to keep the top of the roof vent below the ridge line. Mark this position. Vent location position should now be approximately 24" down from ridge line and centered between rafters.

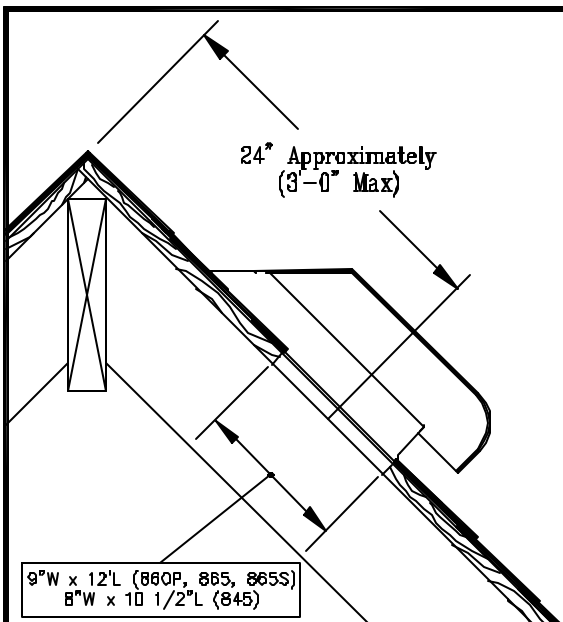

4. Using marked position as center point, scribe a rectangle (9" x 12" for 860P, 865, & 865S; 8" x 10 1/2" for 845 series). Drill a starter hole inside the rectangle, a 1/2" drill bit should do this nicely.


5. Starting in the drill hole and following the scribe ones, cut the rectangular opening using either a keyhole saw or a saber saw with a sharp coarse blade. If you do not have a coarse blade, cut away the shingles inside the rectangle with a utility knife before cutting roof decking.

6. Carefully remove roofing nails from top row of shingles so that the flashing of the roof vent will slide under these shingles.

7. Apply roofing cement around the edge of the hole at the top and sides.

8. Carefully slide vent into place with arrow pointing up. Make sure throat of vent is centered over vent hole. Fasten the base to roof decking with roofing nails, USING THE ELONGATED HOLES ONLY.

9. Finish mounting by sealing an seams and nails with roofing cement. Also use roofing cement to fasten down loose edges of shingles.

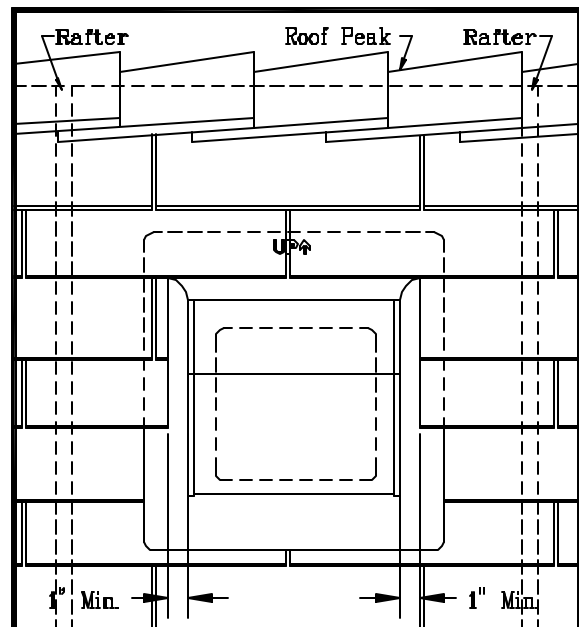

"ITEMS NEEDED FOR INSTALLATION"
KEYHOLE SAW OR SABER SAW
UTILITY KNIFE / DRILL WITH 1/2" BIT
HAMMER AND ROOFING NAILS
TAPE MEASURE / ROOFING CEMENT
COMPASS OR STRING

Toll Free 1-800-643-5596 Local - 501-982-6511
FAX - 501-982-1258 E-Mail - lomanco@aristotle.net
Internet - www.lomanco.com