


LomanCool 2000 Power Vent Installation Instructions

READ AND SAVE THESE INSTRUCTIONS

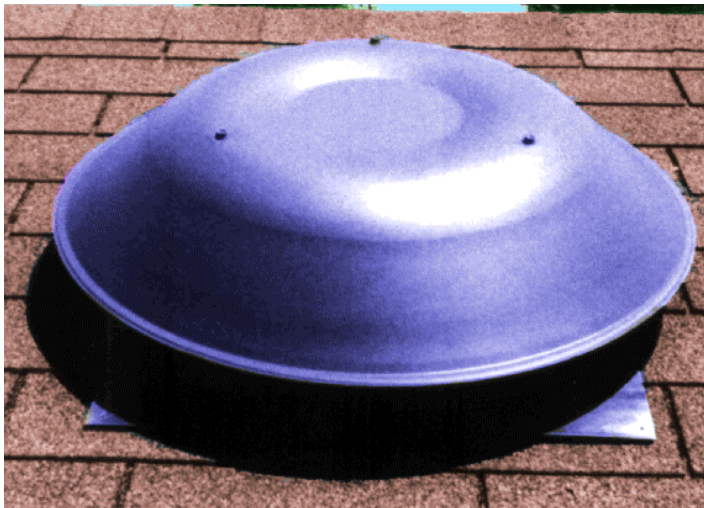

WARNING —TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- A. Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer.
- B. Before servicing or cleaning unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag to the service panel.
- C. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated constructions.
- D. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel-burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guide lines and safety standards, such as those published by the National Fire Protection Association (NFPA) and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- E. When cutting or drilling into wall or ceiling, do not damage electrical wiring or other hidden utilities.
- F. Ducted fans must always be vented to the outdoors.
- G. NEVER - place a switch where it can be reached from a tub or a shower.
- H. If this unit is to be installed over a tub or shower, it must be marked as appropriate for the application.

CAUTION - For general ventilating use only. Do no use to exhaust hazardous or explosive materials and vapors.

CAUTION- This unit has an unguarded impeller. Do not use in locations readily accessible to people or animals. This fan is intended for use facing an unoccupied space only.

WARNING - To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control.

IMPORTANT

With the power vent installed, at least 1,040 square inches of inlet area must be provided. This is achieved by installing 16 8" x 16" intake vents, measuring 65 square inches each.

Be sure your fan is properly installed. Your fan is designed to operate on 120 VAC 60 Hz.


Sharp edges are exposed during installation. Use gloves and other safety equipment to avoid accidents.

OPERATION

Your ventilator will operate automatically as needed. The adjustable thermostat has been set at the factory to come on at 100 F., off at 85' F. The motor has been permanently lubricated and does not require additional lubrication.

INSTALLATION


1. Determine approximately where on your roof you will place your Power Ventilator.
 - At the highest point in your attic or air space. Best if centered on roof length, and less conspicuous if placed on side away from street.
 - Keep the top of the ventilator lower than the ridge line.
 - Establish your position with accuracy (because you will want to duplicate it inside your attic) by measuring down from the ridge and over from the roof edge.

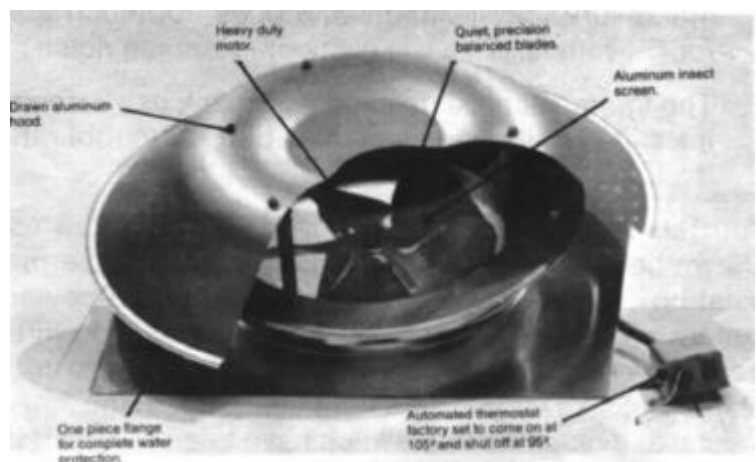

2. Working now from the inside, mark your planned opening (as you established position when on roof) and relocate your position to be centered between two rafters. Drive a nail into the roof so that it can be easily found when you return to the roof. Before you return to the roof, be sure that you have: (a) string or compass, (b) drill and drill bit, (c) keyhole or electric jig (saber) saw with sharp coarse blade, (d) ventilator and base, (e) roofing nails and hammer, and (f) roofing cement and applicator.
3. Using the nail driven from the inside as center, scribe a 14" dia. Circle using string or compass. Care should be taken not to make the hole too large.
4. Drill starting holes for sawing inside the scribed circle. A hand drill with 1/2" bits should do the job nicely.
5. Starting in one of the drill holes, cut circular opening, faithfully following scribed line. Use either keyhole or an electric jig (saber) saw with sharp coarse blade to cut shingles and roof boards at one time. If you do not have a coarse blade, cut away shingles inside the circle with utility knife before cutting roof boards.
6. Carefully remove roofing nails from top row of shingles so that the flashing of the ventilator will slide under top row.
7. Slide ventilator carefully into place with arrow pointing up, letting thermostat hang down into opening.
8. Finish the exterior mounting by sealing all seams and nails with roofing cement. Use cement also to fasten down loose edges of shingles. Fasten the aluminum base to roof boards with roofing nails. Keep heads of nails under shingles wherever possible.
Return to the attic. You now have to mount the thermostat and do the wiring.
9. Position thermostat base high (in the warmest part of the air space) and above the ventilator opening. Make sure that flexible cable does not touch the roof or rafters. (This will eliminate vibration noise.)

The thermostat is a delicate instrument, use screws instead of nails when fastening bracket to roof rafter.

Your Lomanco Power Ventilator **MUST** be wired as shown below. Make all connections inside the thermostat box. Connect white (neutral) wire from a power supply to white wire on motor. Connect black (hot) wire from power supply to black wire on the thermostat and black wire on switch. The other black wire on the thermostat and black wire on switch have been connected to the black wire on the motor at the factory, but should be checked to ensure a good tight connection. The ground wire should be connected to the screw in the bottom of the thermostat box.

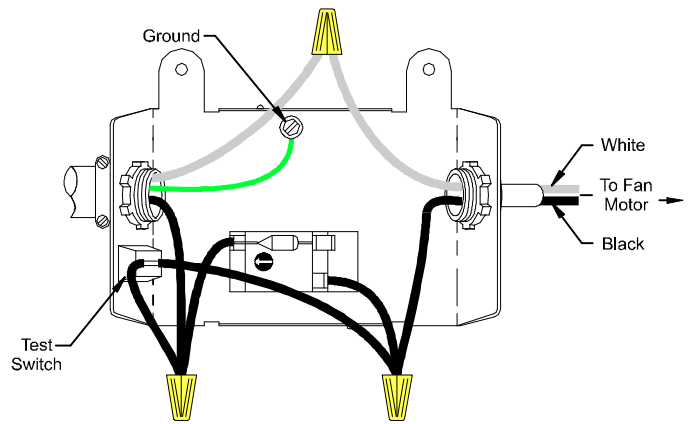

10. **WARNING!** Turn off power before connecting power wires to ventilator. Your power feed wire should be 14 gauge or larger wire size (two wires plus ground). Take from thermostat box and bring to power distribution panel. Feed through bushing and connect to 15-amp circuit breaker.

- ⇒ Black to circuit breaker;
- ⇒ White to neutral base;
- ⇒ Plain to ground base.


Recheck your connections. Then turn the power on. You should now enjoy the advantages of a Power Ventilator, operating as the thermostat demands.

A test switch has been provided. To make sure your Lomanco Power Ventilator is operating properly, simply "PUSH TO TEST." Caution should be taken to ensure that no body parts come in contact with any of the vent's moving parts during this test.

NOTE: To control humidity in your attic, a humidistat is also available.

LIMITED WARRANTY

Lomanco, Inc. Warrants this product for five (5) years against any defects due to workmanship, parts or mechanical failure. For warranty service the defective product must be sent, freight prepaid to Lomanco Inc. P.O. Box 519, 2101 West Main Street, Jacksonville, Arkansas 72076. If the unit is found to be defective it will be replaced with a new unit at no charge and returned, freight prepaid. This warranty does not include replacement due to destructive storms. The return of the warranty card accompanying the product within ten (10) days of the initial installation of the product is a condition precedent to warranty coverage. ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE ALSO LIMITED IN DURATION TO FIVE (5) YEARS. CONSEQUENTIAL DAMAGES TO PROPERTY RESULTING FROM A BREACH OF ANY WARRANTY MENTIONED HEREIN ARE EXPRESSLY EXCLUDED. Some states do not allow limitations on how long an implied warranty lasts or do not allow exclusion or limitation of consequential damages, so the above limitation may not apply to you. The warranty gives you specific legal rights and you may also have other rights which vary from state to state.

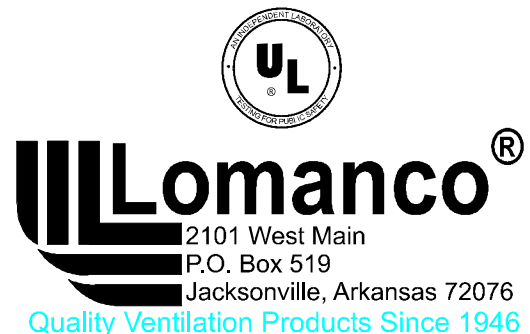

Toll Free 1-800-643-5596
In Arkansas 501-982-6511